

geemarc™
Hear the Difference

CL595™

50dB



USER GUIDE

UK

www.seniorstore.nl

TABLE OF CONTENTS

1.	IMPORTANT SAFETY INSTRUCTIONS.....	1
2.	SET UP THE TELEPHONE	2
2.1	Package Contents.....	2
2.2	Location.....	2
2.3	Connect the Corded Base Station.....	3
2.4	First use of your base	3
2.5	Base Station Installation options	4
2.5.1	Tabletop to Wall Mount Installation.....	4
2.5.2	Wall Mount to Tabletop Installation.....	5
3.	GET TO KNOW YOUR PHONE	6
3.1	Overview of the Corded base.....	6
3.2	Base corded Menu Structure.....	9
3.3	Base LCD Display.....	10
3.4	Text and Digit Entry Table.....	11
3.4.1	English Character Set.....	11
4.	USE YOUR PHONE.....	12
4.1	Make an External Call.....	12
4.1.1	Preparatory Dialing.....	12
4.1.2	Direct Dialing.....	12
4.1.3	Call from the Phonebook.....	12
4.1.4	Call from the Call List.....	12
4.1.5	Call from the Redial List.....	12
4.1.6	Call Timer.....	12
4.2	Make a Call from Direct Access Memory.....	12
4.3	Answer a Call.....	13
4.4	Volume Boost Function.....	13
4.5	End a Call.....	13
4.6	Adjust Earpiece and Speakerphone Volume.....	13
4.7	Mute a Call.....	13
4.8	Modify the tonality during a call.....	13
4.9	Emergency Call without Main Power.....	13
4.10	Redial the Last Number.....	14
4.10.1	Redial a Number from the Redial List.....	14
4.10.2	Store a Redial Number into the Phonebook.....	14
4.10.3	Delete a Redial Number.....	14
4.10.4	Delete the Entire Redial List.....	14
4.11	Find the Handset (if you have an additional handset).....	14
4.12	Make an Internal Call.....	15
4.12.1	Intercom.....	15
4.12.2	Call All Handsets.....	15
4.12.3	Transfer an External Call.....	15
4.12.4	Make a 3-way Conference Call.....	15
5	PHONEBOOK.....	16
5.1	Add a New Phonebook Entry.....	16
5.2	Search for a Phonebook Entry.....	16
5.3	View a Phonebook Entry.....	16
5.4	Edit a Phonebook Entry.....	16
5.5	Delete a Phonebook Entry.....	17
5.6	Delete the Entire Private Phonebook.....	17
5.7	Check the Phonebook Usage.....	17
5.8	Set the Fast Dial Numbers.....	18
5.8.1	Add or Edit the Fast Dial Number.....	18
5.8.2	view a Fast Dial Number.....	18
5.8.3	Delete the fast dial number.....	18
5.8.4	Delete all the fast dial number.....	18
5.9	VIP NUMBER.....	19

	5.9.1	Record a VIP number	19
	5.9.2	Use a VIP number	19
	5.9.3	Delete one or all VIP number	19
	5.9.4	Record VIP number in photo memory	19
	5.9.5	Check the VP usage	19
6		CALLER DISPLAY (NETWORK DEPENDENT)	20
	6.1	View the Call List	20
	6.2	Details on the call list number	20
	6.3	Store a Call List Number into the Phonebook	21
	6.4	Store a Call List Number into the Blacklist	21
	6.5	Store a Call List Number into a Photo memory	21
	6.6	Delete an or all the Entire Call List	21
7		DIRECT MEMORIES KEYS	22
	7.1	Record or Edit direct memory key	22
	7.2	Record a voice tag	22
	7.3	Listen or delete a voice tag	22
	7.4	Delete a direct memory key	23
	7.5	Set the memory keys	23
8		BLACK LIST FUNCTION	24
	8.1	Record or edit a black list number	24
	8.2	Check or edit the information of the phone number blocked	24
	8.3	Delete an or all black list number	24
	8.4	Activation of the black list function	24
	8.5	Activation of the function for the private or unavailable number	25
9		INTERCOM FUNCTION	25
10		DATE AND HOUR SETTING	25
	10.1	Set the date format	25
	10.2	Set the time format	25
	10.3	Set the date and time	25
11		TEXT LANGUAGE SETTING	25
12		PHONE SETTINGS	26
	12.1	Base Settings	26
	12.1.1	Set the Ringer Melody for Internal Calls	26
	12.1.2	Set the Ringer Melody for External Calls	26
	12.1.3	Set the Ringer Volume	26
	12.1.4	Set the key tone	27
	12.1.5	Set the Flash Time	27
	12.1.6	First ring function	27
	12.1.7	Reset your base	27
	12.1.8	Registration	28
13		RESEARCH ONE HANDSET	28
14		SOS EMERGENCY FUNCTION	29
	14.1	SOS Setting	29
	14.2	Delete an or all SOS number	29
	14.3	Make an emergency call	29
	14.4	Record SOS message	29
	14.5	Play SOS message	29
	14.6	Delete a SOS message	30
	14.7	Set the talking language	30
15		SETTING AN ALARM	30
	15.1	Turn ON/OFF the Alarm	30
	15.2	Set the Alarm melody	31
	15.3	Rename the name of your Alarm	31
	15.4	Record a voice memo for the alarm	31
	15.5	Delete or play a voice memo Alarm	31
16		TALKING HELP FUNCTION	31

17	ANSWERING MACHINE	32
17.1	Switching Answering Machine On/Off.....	32
17.2	Play Messages on TAM	32
17.3	Delete all Messages on TAM	33
17.4	Record Memos on TAM	33
17.5	Answering Machine Settings	33
17.5.1	Set the talking TAM language	33
17.5.2	Turn ON/OFF the base screening	34
17.5.3	Record your Outgoing Message (OGM)	34
17.5.4	Playback the Outgoing Message (OGM)	34
17.5.5	Delete a Personalized OGM (SET OGM to DEFAULT)	34
17.5.6	Set the Answer Delay.....	35
17.5.7	Set the Recording Time of Incoming Message	35
17.5.8	Activate Remote Access	35
	17.5.8.1 Change the 4-Digit Remote Access PIN	35
	17.5.8.2 Activate or Deactivate the Remote access.....	36
17.5.9	Function message alert.....	36
17.5.10	Remote Operations.....	37
18	TROUBLESHOOTING.....	38
19	TECHNICAL SPECIFICATIONS	40
20	CARE AND MAINTENANCE INSTRUCTIONS.....	41
21	GUARANTEE.....	42
22	DECLARATIONS.....	43

1. IMPORTANT SAFETY INSTRUCTIONS

Please refer to our website: www.geemarc.com for an up to date user guide, as there may be important updates and changes you need to be aware of !

Normal operating temperature for the product (e.g.0°C–40°C).

Use only the adapters listed below.



Power adapter information: output: 6V DC 0.8A, 4.8W. Vtech Telecommunications Limited.
Model: CS6F060080FG (EU), CS6F060080FBB (UK)

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all the instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
5. Do not expose the telephone to direct sunlight or extreme cold environment. Do not put the telephone close to a heating source such as radiators, cookers, etc.
6. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
7. Unplug this product from the wall outlet and refer servicing to the distributor under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If the product does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
8. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
9. Do not use the telephone to report a gas leak in the vicinity of the leak.
10. For pluggable equipment, the socket-outlet (power adaptor) shall be installed near the equipment and shall be easily accessible.

Disposal warning

1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2012/19/EU.
2. All electrical and electronic products/battery should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance/battery will help prevent potential negative consequences for the environment and human health.

For more detailed information about disposal of your old appliance/battery, please

Contact your city office, waste disposal service or the shop where you purchased the product.



2. SET UP THE TELEPHONE

2.1 Package Contents

The package contains the following items:

- Base station
- Corded handset
- AC power adapter
- Telephone line cord
- User's manual

2.2 Location

For maximum coverage and reduce the interference, here are some guidelines you should consider when you place the base unit,

- place it away from electronic appliances such as televisions, microwave ovens, radios, personal computers, wireless devices or other cordless phones.
- avoid facing radio frequency transmitters, such as external antennas of mobile phone cell stations.
- avoid plugging it into the same circuit as other major household electrical appliances because of the potential for interference. Try moving the appliance or the base unit to another power outlet.

If the reception for a base unit location is not satisfactory, move it to another location for better reception.

2.3 Connect the Corded Base Station


Plug one end of the telephone line cord into a telephone jack or a DSL filter.

If you have DSL high-speed Internet service, a DSL filter (not included) is required.

Route the telephone line cord through this slot.

Click the wall mount bracket securely into the mounting slots for tabletop use.

Plug the other end of the telephone line cord into the telephone jack on the back of the telephone base.

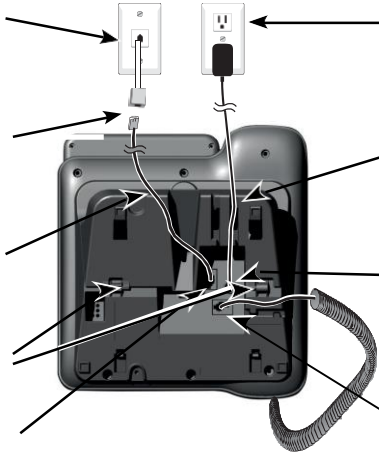

Plug the large end of the telephone base power adapter into a power outlet.

Route the power adapter cord through this slot.

Plug the small end of the telephone base power adapter into the power adapter jack on the back of the telephone base.

Plug the corded handset cord into the corded handset jack on the back of the telephone base.

NOTE

- Use only the power adaptor supplied with the base station.
- Classified TNV-3 according to EN62368-1 standard.
- Classified "hazardous voltage" according to EN62368-1 standard

2.4 First use of your base

After you have connected the power adaptor, the display asks you to select your text language with the keys **▼/▲**, press **MENU/OK** to valid.

Then enter the date with the keypad and validate by pressing **MENU/OK**.

Then enter the correct hour with the keypad and validate by pressing **.**

Then select your talking language with the keys **▼/▲**, press **MENU/OK** to valid


2.5 Base Station Installation options

Your telephone base is ready for tabletop use. If you want to mount your telephone on a wall, follow the steps to connect the telephone base with a standard dual-stud telephone wall mounting plate. You may need a professional to install the mounting plate.


2.5.1 Tabletop to Wall Mount Installation

1. Unplug the power adapter from the power outlet. Unplug the telephone line cord from the wall jack (or DSL filter).
2. Put the corded handset aside. Hold down the switch hook on the telephone base, and then slide the handset tab upwards to remove it from the slot. Rotate the handset tab by 180 degrees. Then, replace the handset tab into the slot until it locks into position.
3. Press down on the tabs of the wall mount bracket to release it from tabletop orientation.
4. Rotate the wall mount bracket down and push it into the telephone base until it clicks into place.
5. Plug the telephone line cord (or DSL filter) into the wall jack. Plug the power adapter into a power outlet. Align the slots on the back of the telephone base with the studs of the wall mounting plate.
6. Slide the telephone base down until it locks securely. Bundle the telephone line cord and power adapter cord neatly with twist ties.

①

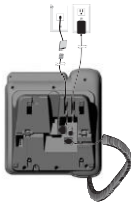


②

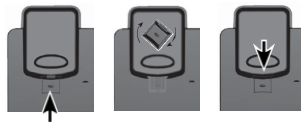


③




④

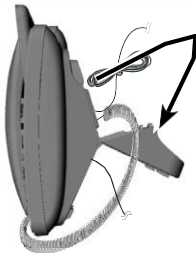

⑤

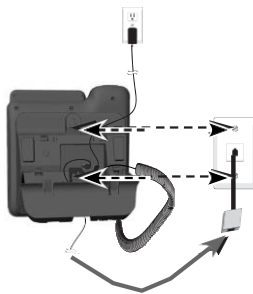


⑥

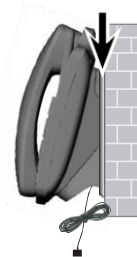


252 Wall Mount to Tabletop Installation

1. Unplug the power adapter from the power outlet. Unplug the telephone line cord from the wall jack (or DSL filter). If the telephone line cord and power adapter cord are bundled, untie them first. Push the telephone base up to remove it from wall.
2. Put the corded handset aside. Hold down the switch hook on the telephone base, and then slide the handset tab upwards to remove it from the slot. Rotate the handset tab by 180 degrees. Then, replace the handset tab into the slot until it locks into position.
3. Gently pull upward to release the wall mount bracket. Rotate the wall mount bracket up to tabletop position and push it into the telephone base until it clicks into place.
4. Plug the telephone line cord (or DSL filter) into the wall jack. Plug the power adapter into an power outlet. Bundle the telephone line cord and power adapter cord neatly with twist ties if necessary.


①

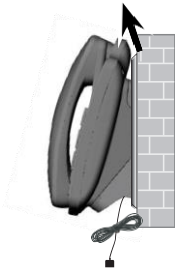


②

 

③

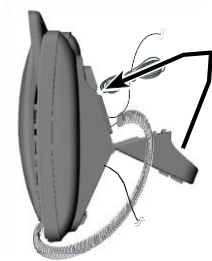


④

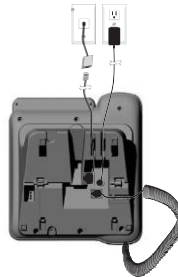





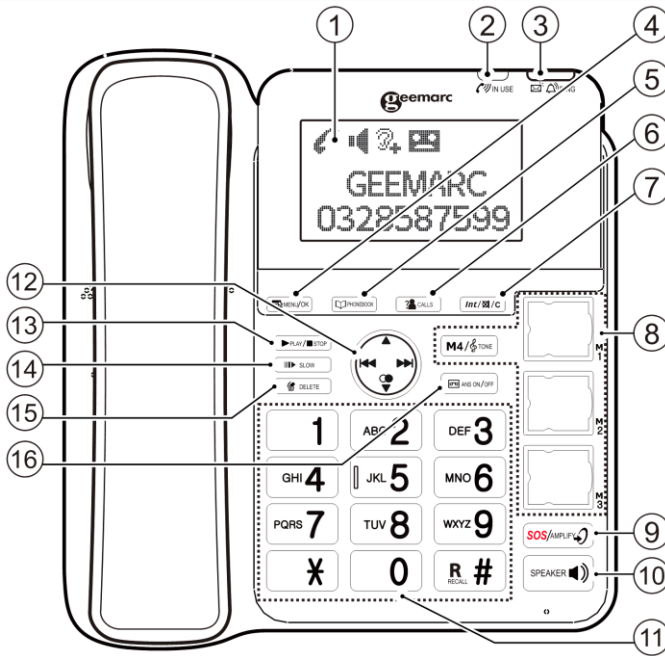







3. GET TO KNOW YOUR PHONE

 3.1 Overview of the corded base



1	LCD DISPLAY
2	IN USE : ON during a call.
3	RING light <ul style="list-style-type: none"> ● Flashes when there is an incoming call. ● Steadily on when the answering machine is turned on. Flashes when there are new memos or messages in the answering machine.
4	MENU / OK <ul style="list-style-type: none"> ● In idle mode: Press to access the main menu. ● In sub-menu mode: Press to confirm the selection. ● In Redial list/Call list: Press to store the number into Phonebook.
5	PHONEBOOK: <ul style="list-style-type: none"> ● In idle: Press to access the phonebook.
6	CALLS (CALL LIST) <ul style="list-style-type: none"> ● In idle mode: Press to access the call list.

7	<p>Int/☒/C INT / MUTE / CLEAR</p> <ul style="list-style-type: none"> ● In main menu mode: Press to go back to idle screen. ● In sub-menu mode: Press to go back to previous level. ● In sub-menu mode: Press and hold to go back to idle screen. ● In editing / predialing mode: Press to clear a character/digit. ● In editing / predialing mode: Press and hold to delete all the character / digits. ● During a call: Press to mute / unmute the microphone. ● In ringing: Press to silence the base ringer. ● In idle mode: Press to intercom another system handset.
8	<p>MEMORY KEYS (3 PHOTO SPEED DIAL KEYS; 1 TONE KEY - M4</p> <ul style="list-style-type: none"> ● In idle mode: Press to dial out to the number stored in the memory key. ● During a call: press M4 to increase the high frequency or the low frequencies.
9	<p>SOS/AMPLIFY  VOLUME BOOST / SOS</p> <ul style="list-style-type: none"> ● During a call: Press to activate/deactivate the VOLUME BOOST function. ● In idle mode: Press and hold for 2 seconds to launch the emergency calling sequence set in your phone. ● In SOS mode: press and hold for 2 seconds to stop the emergency call.
10	<p> SPEAKER</p> <ul style="list-style-type: none"> ● In Idle mode or Phonebook/ Call list/ Redial list view mode: Press to make a call with speakerphone.
11	<p>ALPHANUMERIC KEYPAD, STAR (*), HASH/RECALL (#/R)</p> <ul style="list-style-type: none"> ● In predial or editing mode: Press to insert a digit. ● 0 key in predial or editing mode: Press and hold to insert a pause. ● On line: Press the key R/# to make a recall.

12	<p>NAVIGATION KEYS</p> <p> UP</p> <ul style="list-style-type: none"> ● In menu mode: Press to scroll up the menu items. ● In Phonebook list / Redial list / Call list: Press to scroll up the list. ● In editing mode: Press to move the cursor one character to the right. ● During a call or TAM message playback: Press to increase the volume. <p> REPEAT / OGM</p> <ul style="list-style-type: none"> ● In Idle mode: Press and hold 2 sec until beep to record OGM. ● Press  to stop the recording. ● In TAM message playback mode: Press to go back to previous message. <p> MEMO / SKIP FORWARD</p> <ul style="list-style-type: none"> ● In Idle mode: Press and hold 2 sec until beep to record a memo and press  to stop the recording. ● In TAM message playback mode: Press to skip to next message. <p> DOWN / REDIAL LIST</p> <ul style="list-style-type: none"> ● In Idle mode: Press to access the redial list. ● In menu mode: Press to scroll down the menu items. ● In Phonebook list / Redial list / Call list view mode: Press to scroll down the list. ● In editing mode: Press to move the cursor one character to the left. ● During a call or TAM message playback: Press to decrease the volume.
13	<p> PLAY / STOP</p> <ul style="list-style-type: none"> ● In Idle mode: Press to playback messages. ● During TAM message playback: Press to stop playing messages.
14	<p> SLOW</p> <ul style="list-style-type: none"> ● During TAM MSG playback: Press to playback messages in slow speed.
15	<p> DELETE</p> <ul style="list-style-type: none"> ● In TAM message playback mode: Press to delete the current TAM message playback. ● In idle mode: Press and hold to delete all old messages.
16	<p> ANS ON / OFF</p> <ul style="list-style-type: none"> ● In Idle: Press to switch the answering machine ON or OFF. ● The cassette tape icon is displayed on the screen if activate.

3.2 Base corded Menu Structure

In idle mode, pressing **MENU/OK** will access the menu. Refer to the following for the menu structure.


Key Press **MENU/OK**








Main Menu	CALL loog	PHOTO MEM	PHONEBOOK	CALL BLOCK	INTERCOM	DATE & TIME	TEXT LANG
Sub menu	Review Call list Under a call list entry: DETAILS ADD TO PB ADD TO BL ADD TO PM DELETE DELETE ALL	M1 M2 M3 M4	ALL SPEED DIAL VIP Review Phonebook list Under a selected Phonebook entry: ADD EDIT DELETE DELETE ALL ADD VIP ADD TO PM ADD TO SD STATUS	BLACK LIST SETTINGS BLOCK MODE W/O NUM	HANDSET 1 HANDSET 2 HANDSET x ALL	DATE FORM TIME FORM SET DATE	ENGLISH FRANCAIS DEUTSCH ITALIANO NEDERLAND ESPANOL PORTUGUES

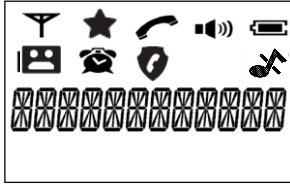BS SETTING	PAGE ALL HS	REGISTER	SET SOS	REMINDER	TLK DIGITS	ANS. SYS
RING SETUP KEY TONE FLASH TIME FIRST RING DEFAULT			SOS NUMBER SOS MSG SOS LANG	ALARME 1 TO 10 Under one alarm ON/OFF MELODY RENAME VOICE MEMO		PLAYBACK DEL OLD MEMO TAM ON/OFF SET TAM TAM LANGUAGE CALLSCREEN TAM MSG ANSWER DELAY RECORD TIME REMOTE ACC. CHANGE PIN MSG ALERT

3.3 Base LCD Display

The screen display gives you information on the current status of the telephone.



	This will display when there is a new calls list entry or if one is being viewed.
	Indicate a call is in progress.
	Indicate that speakerphone is being used.
	Steadily on when the telephone answering machine (TAM) is turned on. Flashes when a new message is received in the
	Indicate that the ringer is switched off.
AM PM	Indicate the time format.
	Steadily on when an alarm is set. Flashes when the alarm time set before reaches.
	Steadily on when one alarm is activated

3.4 Text and Digit Entry Table

The following tables show you where each letter and punctuation character can be found. This will be helpful when storing a name in the phonebook or renaming your handset.

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

Writing Tips:

1. Once a character is selected, the cursor will move to the next position after a short pause.
2. You can move the cursor within the text by ▲/▼ to amend the text entry.
3. Press **Int/☒/C** on the telephone base, to delete the last character.
4. Press and hold **Int/☒/C** on the telephone base, to delete the entire text string.


3.4.1 English Character Set

Key	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone number editing, date / time editing)	
	Key press	1st	2nd	3rd	4th	5th	6th	7th	8th	9th		10th
1	1	.	-	'	()	*	#	&			1
2	a	b	c	A	B	C	2					2
3	d	e	f	D	E	F	3					3
4	G	h	i	G	H	I	4					4
5	J	k	l	J	K	L	5					5
6	m	n	o	M	N	O	6					6
7	p	q	r	s	P	Q	R	S	7			7
8	t	u	v	T	U	V	8					8
9	w	x	y	z	W	X	Y	Z	9			9
0	espace	0										0, P (Pause)
*												*
#												#

4. USE YOUR PHONE

4.1 Make an External Call



4.1.1 Preparatory Dialing

Enter the phone number and lift the corded handset or press **SPEAKER**  to dial the number. Press **Int/☒/C** to clear the entry when entering the number.

4.1.2 Direct Dialing

Lift the corded handset or press **SPEAKER**  to take the line and enter the phone number.



4.1.3 Call from the Phonebook

Press  **PHONEBOOK** to access the phonebook and press **▲▼** to select the desired phonebook entry. Lift the corded handset or press **SPEAKER**  to dial out to the selected phonebook entry.

4.1.4 Call from the Call List

Press  **CALLS** to access the call list and press **▲▼** to select the desired call list entry. Lift the corded handset or press **SPEAKER**  to dial out to the selected call list entry.

4.1.5 Call from the Redial List

1. Press  to access the redial list
2. Press **▲▼** to select the desired redial number.
3. Lift the corded handset or press **SPEAKER**  to dial out to the selected redial number.


4.1.6 Call Timer

Your handset or base automatically times the duration of each call. The call timer will display a few seconds after the call has ended. It is shown in hours, minutes and seconds format (HH:MM:SS)

4.2 Make a Call from Direct Access Memory

In idle mode, press any direct memory key in which a number is stored, the phone will automatically dial out the telephone number stored in the selected memory key in speakerphone mode.


OR

Lift the corded handset or press **SPEAKER** , and then press any direct memory key in which a number is stored to dial the number pre-stored into the keys respectively.

NOTES:



- You need to set the direct access number first. See **Section 7.1** for details.
- If no number is stored, you will hear beeps.

4.3 Answer a Call

When there is an incoming ring, pick up the corded handset or press **SPEAKER**  to answer the call.

4.4 Volume Boost Function


The Volume Boost function allows you to amplify the handset earpiece volume to compensate for the ear's limited sensitivity.

During a call, you can activate the Volume Boost function with the volume of earpiece increased by several dBs by pressing **SOS/AMPLIFY** , "BOOSTER ON" displays on the base screen. To cancel it, press **SOS/AMPLIFY**  again.

4.5 End a Call

During a call, put the corded handset on the base station to end the call.

OR

Press **SPEAKER**  if you have a call in speakerphone mode.

4.6 Adjust Earpiece and Speakerphone Volume

There are 6 levels (VOLUME 1 to VOLUME 6) to choose from for each of earpiece and 7 levels for speakerphone volume of the base.

Using the base: During a call:

Press **▲/▼** to select **volume 1-6**. The current setting is shown. When you end the call, the settings will remain at the last selected level.

4.7 Mute a Call

With the call muted, you can talk to someone nearby without letting the caller hear you during a call.

Using the base: During a call:

Press **Int/☒/C** to mute the microphone and "MUTE ON" is displayed on the LCD. Your caller cannot hear you. Press **Int/☒/C** again to resume the microphone.

4.8 Modify the tonality during a call

Using the base: During a call:

Press **M4 TONE** to increase the high, low frequencies or come back in normal response.

4.9 Emergency Call without Main Power

The corded base unit can make an emergency call with the corded handset when the mains AC power is disconnected.

Pick up the corded handset and wait for several seconds to get the dial tone and then enter the phone number to make a call.

REMARK:

It is not possible to dial numbers from memories when the mains power is off.

When the mains power is off, you can also answer an incoming call with the corded handset.

When the phone rings, pick up the corded handset to talk to the caller.

4.10 Redial the Last Number

You can redial up to 10 of the last numbers called on the cordless handset or on the corded telephone base. If you have stored a name in the phonebook to match with the number, the name will be displayed instead. The most recently dialed number will be displayed at the top of the redial list.

4.10.1 Redial a Number from the Redial List

1. In idle mode, press  to view the redial list.

OR


Press **MENU/OK** 2 times to access at the redial list

2. Press  to browse the redial list.
3. Pick up the corded handset or press **SPEAKER**  to dial to the selected redial number.

NOTE:


If there are no numbers in the redial list, the display will show “EMPTY”.

4.10.2 Store a Redial Number into the Phonebook


1. Follow Steps 1 and 2 in section 4.10.1.
2. Press **MENU/OK** and  to select **ADD TO PB?**
3. Press **MENU/OK** and check the redial number.
4. Press **MENU/OK** and enter the name.

Press **MENU/OK** to confirm

4.10.3 Delete a Redial Number

1. Follow Steps 1 and 2 in section 4.10.1.
2. Press **MENU/OK** and  to select **DELETE**
3. Press **MENU/OK** to confirm and CONFIRM? is displayed.
4. Press **MENU/OK** to reconfirm


4.10.4 Delete the Entire Redial List





1. Follow Steps 1 and 2 in section 4.10.1
2. Press **MENU/OK** and  to select **DELETE ALL?**
3. Press **MENU/OK** to confirm and CONFIRM? Is displayed.
4. Press **MENU/OK** to reconfirm.

4.11 Find the Handset (if you have added an additional handset)

This feature helps you find the misplaced handset(s).

You can locate the handset by operation on the base station as below.

1. In idle mode, press **MENU/OK** and  to select **PAGE ALL HS.**
2. Press **MENU/OK** to confirm. “PAGING” will flash on the base screen.

All the handsets registered to the base will produce the paging tone, and “PAGING” will flash on the screen. You can stop the paging by pressing   /  /  **CANCEL/MUTE** on any handset or **Int/☒/C** on the base to stop paging.

NOTE:


If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

4.12 Make an Internal Call (if you have added an additional handset)

This feature allows you to make internal calls, transfer external calls and make conference calls. If the called base or handset is not answered within 60 seconds, the called base or handset will stop ringing and the calling one will return to standby mode.

4.12.1 Intercom (if you have added an additional handset)

Using the corded base:

1. In idle mode, press **Int/☒/C** and **▲▼** to select the handset you want to call.
2. Press **MENU/OK** to confirm.
3. The called handset rings. Press  on the called handset to establish the internal call.

NOTE:

If only one cordless handset is registered to the base station, press **Int/☒/C** will call the cordless handset immediately.


4.12.2 Call All Handsets (if you have added an additional handset)

Using the corded base:

1. In idle mode, press **Int/☒/C** and **▲▼** to select **ALL**.
2. Press **MENU/OK** to confirm.

4.12.3 Transfer an External Call (if you have added an additional handset)

Using the corded base: During an external call:

1. Press **MENU/OK** and **▲▼** to select **INTERCOM**
2. Press **MENU/OK** and choose the desired handset you want to intercom with, then press **MENU/OK**.
3. The external call is put on hold automatically and the called handset rings.
4. Press  on the called handset to establish an internal call.
5. Hang up the corded handset on the calling base to end the internal call.
6. The external call is transferred to the called handset.

4.12.4 Make a 3-way Conference Call

The conference call feature allows one external call to be shared with the corded base and cordless handset or two cordless handsets. The three parties can share the conversation and no network subscription is required.

During the external call:

1. Follow Steps 1 to 4 in section 4.12.3.
2. Press and hold **X** on the calling handset to establish the conference call.

NOTE:

Any party (corded base or cordless handset) hangs up during a conference call will leave the other party still in connection with the external call.

5. PHONEBOOK

Your phone can store up to 50 private phonebooks in the cordless handset and the telephone base with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringer tones for your phonebook entries. Phonebook entries are stored alphabetically by name.


5.1 Add a New Phonebook Entry

1. Press **PHONEBOOK** to display the first phonebook entry in alphabetical order.

OR

1. Press **MENU/OK** and **▲/▼** to select **PHONEBOOK** main menu item
2. Press **MENU/OK** 2 times to access the phonebook list
3. Press **MENU/OK** and **▲/▼** to select **ADD**.
4. Press **MENU/OK** and enter the number.
5. Press **MENU/OK** and enter the name.
6. Press **MENU/OK** to store the phonebook entry.

5.2 Search for a Phonebook Entry

1. Enter the phonebook list in press the key .
2. Enter the first character of your desired name of the phonebook entries by multi-tap.

5.3 View a Phonebook Entry

1. Press **PHONEBOOK** to display the first phonebook entry in alphabetical order.

OR

1. Press **MENU/OK** and **▲/▼** to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** 2 times to access the phonebook list
3. Press **▲/▼** to select and view the desired phonebook entry.

OR

Enter the first character of your desired name of the phonebook entry by multi-tap

5.4 Edit a Phonebook Entry

1. Press **PHONEBOOK** to display the first phonebook entry in alphabetical order.

OR

1. Press **MENU/OK** and **▲/▼** to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** 2 times to access the phonebook list
3. Scroll **▲/▼** until you see the contact you want to edit.
4. Press **MENU/OK** and **▲/▼** to select **EDIT**.
5. Edit the number with the key **Int/☒/C** and press **MENU/OK**.
6. Edit the name with the key **Int/☒/C** and press **MENU/OK**.
7. Press **MENU/OK** to confirm the setting.

5.5 Delete a Phonebook Entry

1. Press **MENU/OK** and ▲/▼ to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** 2 times to access the phonebook list
3. Scroll ▲/▼ until you see the contact you want to delete.
4. Press **MENU/OK** and ▲/▼ to select **DELETE**.
5. Press **MENU/OK** and the display shows “**CONFIRM?**”.
6. Press **MENU/OK** to confirm or **Int/☒/C** to cancel.

5.6 Delete the Entire Private Phonebook

1. Press **MENU/OK** and ▲/▼ to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** 2 times to access the phonebook list
3. Press **MENU/OK** and ▲/▼ button to select **DELETE ALL**.
4. Press **MENU/OK** and the display shows “**CONFIRM?**”.
5. Press **MENU/OK** to confirm or **Int/☒/C** to cancel.

5.7 Check the Phonebook Usage

You can check how many phonebook entries have been occupied in your phone and how many phonebook entries are available for you to store in the phonebook.

1. Press **MENU/OK** and ▲/▼ to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** 2 times to access the phonebook list
3. Press **MENU/OK** and ▲/▼ to select **STATUS**.
4. Press **MENU/OK**. The display shows “XX/50 USED” (XX refer to the number of phonebook entries).
5. Press **Int/☒/C** to exit

5.8 Set the Fast Dial Numbers

After setting the fast dial numbers, you can dial to the pre-set numbers by pressing the respective digit keys from idle mode.

5.8.1 Add or Edit the Fast Dial Number

1. Press **MENU/OK** and **▲/▼** to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** and **▲/▼** to select **SPEED DIAL**
3. Press **MENU/OK** and **▲/▼** to select from **KEY 2** to **KEY 9**.

If there is no number stored in the selected key:

4. Press **MENU/OK** and **▲/▼** to select **ADD**.
5. Press **MENU/OK** and enter the Number.
6. Press **MENU/OK** and enter the name
7. Press **MENU/OK** to save

Or if there is already a number stored in the selected key:

4. Press **MENU/OK** and **▲/▼** to select **EDIT**.
5. Press **MENU/OK** to edit the number
6. Press **MENU/OK** to edit the name.
7. Press **MENU/OK** to confirm.

5.8.2 View a fast dial number

You have the possibility to check the fast dial information in follow the procedure

1. Follow steps from 1 to 3 in section 5.8.1
2. Press **MENU/OK** to select **VIEW**.
3. Press **Int/☒/C** to exit

5.8.3 Delete the Fast Dial Number

1. Follow steps from 1 to 3 in section 5.8.1
2. Press **MENU/OK** and **▲/▼** to select **DELETE**.
3. Press **MENU/OK** and the display shows "**CONFIRM?**".
4. Press **MENU/OK** to confirm

5.8.4 Delete all the Fast Dial Number

1. Follow steps from 1 to 3 in section 5.8.1
2. Press **MENU/OK** and **▲/▼** to select **DELETE ALL**.
3. Press **MENU/OK** and the display shows "**CONFIRM?**".
4. Press **MENU/OK** to confirm

5.9 VIP Numbers

You have the possibility to do a VIP phonebook with 50 numbers to have a quick access.

5.9.1 Record a VIP number

Press **PHONEBOOK** to display the first phonebook entry in alphabetical order.

OR

1. Press **MENU/OK** and **▲/▼** to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** 2 times to access the phonebook list
3. Scroll **▲/▼** until you see the contact you want to edit
4. Press **MENU/OK** and **▲/▼** to select **ADD VIP**
5. Press **MENU/OK** to confirm.

5.9.2 Use a VIP number

1. Press **MENU/OK** and **▲/▼** to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** and **▲/▼** to select **VIP**
3. Press **MENU/OK** and **▲/▼** to choose the desired VIP entry
4. Lift the corded handset or press **SPEAKER** **◀))** to dial out to the selected redial number.

5.9.3 Delete one or all VIP number

1. Press **MENU/OK** and **▲/▼** to select **PHONEBOOK**
2. Press **MENU/OK** and **▲/▼** to select **VIP**.
3. Press **MENU/OK** and **▲/▼** to choose the desired VIP entry.
4. Press **MENU/OK** and **▲/▼** to select **DELETE** or **DELETE ALL**.
5. Press **MENU/OK** and the display shows "**CONFIRM?**".
6. Press **MENU/OK** to confirm

5.9.4 Record VIP number in Photo memory

1. Press **MENU/OK** and **▲/▼** to select **PHONEBOOK**
2. Press **MENU/OK** and **▲/▼** to select **VIP**.
3. Press **MENU/OK** and **▲/▼** to choose the desired VIP entry.
4. Press **MENU/OK** and **▲/▼** to select **ADD TO PM**
5. Press **MENU/OK** to confirm

5.9.5 Check the VIP Usage

You can check how many VIP entries have been occupied in your phone and how many VIP entries are available for you to store in the VIP list

Using the base: In idle:

1. Press **MENU/OK** and **▲/▼** to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** and **▲/▼** to select **VIP**.
3. Press **MENU/OK** and **▲/▼** to select **STATUS**
4. Press **MENU/OK**. The display shows **XX/50 USED**" (XX refer to the number of phonebook entries).
5. Press **Int/☒/C** to exit

6. CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed the Caller Line Identification service with your network service provider. Your phone can store up to 20 received calls on the cordless handset and the telephone base with date/time information in the call list. The number will be shown on the LCD when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed with the number. The phone will ring with the melody associated with that phonebook entry.

If the caller number is disabled to send caller information, "WITHHELD" will be displayed.

If the call is an international call or with unknown number, "OUT OF AREA" will be displayed.

In standby, if three unanswered calls are received, "3 CALLS" will be displayed.

6.1 View the Call List

All unanswered calls are saved in calls log with the latest call putting at the top of the list. When the call list is full, the oldest call will be replaced by a new call. The unanswered call which has not been read is marked with ★ icon.

1. Press **CALLS** to access the call list.

OR


1. Press **MENU/OK** and **▲/▼** to select **CALL LOG**.
2. Press **MENU/OK** and **▲/▼** to see the desired call list entry.

6.2 Details on the call list number


In check the details, you could see the date and hour of the call

1. Follow Section 6.1 to access the call list.
2. Press **MENU/OK** and **▲/▼** to select **DETAILS**
3. Press **MENU/OK**, you could see the date, hour and name of the contact
4. Press **MENU/OK**, you could see the name and the contact phone number.
5. Press **MENU/OK** to confirm.

6.3 Store a Call List Number into the Phonebook

1. Follow Section 6.1 to access the call list.
2. Press **MENU/OK** to select **ADD TO PB?**
3. Press **MENU/OK** and check the phone number.
4. Press **MENU/OK** and the name will be displayed.
5. Edit the name if necessary. Use the key **INT/MUTE/CLEAR**  to delete a character.
6. Press **MENU/OK** to confirm.

6.4 Store a Call List Number into the Black list

1. Follow Section 6.1 to access the call list.
2. Press **MENU/OK** to select **ADD TO BL**
3. Press **MENU/OK** and check the phone number.
4. Press **MENU/OK** and the name will be displayed.
5. Edit the name if necessary. Use the key **INT/MUTE/CLEAR**  to delete a character.
6. Press **MENU/OK** to confirm. The display shows OK

6.5 Store a Call List Number into a Photo memory

Follow Section 6.1 to access the call list.

1. Press **MENU/OK** and **▲/▼** to select **ADD TO PM**
2. Press **MENU/OK** and **▲/▼** to select the Photo memory
3. Press **MENU/OK** to confirm.

6.6 Delete an or all Entry in the Call List

1. Follow Section 6.1 to access the call list.
2. Press **MENU/OK** and then **▲/▼** to select **DELETE** or **DELETE ALL**
3. Press **MENU/OK** and the display shows “**CONFIRM?**”.
4. Press **MENU/OK** to reconfirm.

7. DIRECT MEMORY KEYS

There are three photo speed dial memory keys **1**, **2**, and **3** and 1 speed dial memory key **M4** on the right side of the telephone base for you to store frequent use numbers.

After a number is stored in any of these memory keys, you can simply press once on one of these memory keys to dial out to the number stored in it directly.

7.1 Record or EDIT direct memory keys


1. Press **MENU/OK**, and ▼/▲ to select **PHOTO MEM.**
2. Press **MENU/OK**, and ▼/▲ to select **M1** to **M4**.
3. Press **MENU/OK** and ▼/▲ to select **ADD** or **EDIT** and **VOICE TAG**.
4. Press **MENU/OK** then enter number.
5. Press **MENU/OK** then enter name.
6. Press **MENU/OK** to save.

7.2 Record a voice tag

You have the option to enter a voice name in choose **VOICE TAG** and **RECORD** at the point 3 of the section 7.1

If you receive a call with the number registered with a voice tag, you can hear the voice name on the base and on the handset.

NOTES:

- To use a picture big button memory in idle mode, press the picture on the base.
- If you want to pass the call from the speakerphone to the handset, lift the handset off the base to take the call.
- If the handset is not placed on the base, press  to take the line in speakerphone mode and place the handset on the base.

7.3 Listen or delete a voice tag

If you wish listen or delete a voice tag, choose the function **VOICE TAG** and **PLAY** or **DELETE** from point 3 of the section 7.1 and validate your choose.

7.4 Delete a direct memory key



1. Press **MENU/OK**, and **▼/▲** to select **PHOTO MEM**.
2. Press **MENU/OK**, and **▼/▲** to select **M1** to **M4**.
3. Press **MENU/OK** and **▼/▲** to select **DELETE**.
4. Press **MENU/OK** and the display shows "**CONFIRM?**".
5. Press **MENU/OK** to confirm.

7.5 Set the Memory Keys

To insert a photo:

You can insert a desired photo into the compartment of the three photo speed dial memory keys **1**, **2**, and **3**, or write the contact name on the photo speed dial card.

1. Crop your desired photo to the size as indicated below.
2. Put the cropped photo into the photo speed dial compartment. Then flip down the photo speed dial compartment cover.

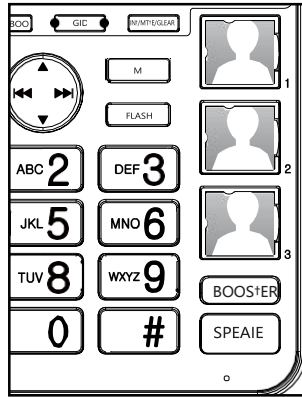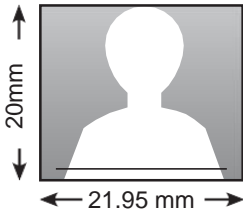

8. BLACK LIST FUNCTION

This feature allows you to block calls from the numbers you have entered.

You have the option to put up to 100 contacts and choose whether you reject all calls, all calls except the VIP contact list, all private or unknown numbers.

8.1 Record or Edit a black list number

1. Press **MENU/OK** and **▲/▼** to select **CALL BLOCK**
2. Press **MENU/OK** and **▲/▼** to select **BLACK LIST**
3. Press **MENU/OK** and **▲/▼** to select **ADD or EDIT**.
4. Press **MENU/OK** and enter the number.
5. Press **MENU/OK** and enter the name.
6. Press **MENU/OK** to store the phonebook entry.

8.2 Check or edit the information of the phone number blocked

With this function, you have the possibility to check the black list number


1. Follow steps from 1 to 3 in section 8.1
2. Press **MENU/OK** and **▲/▼** to choose the desired blocked phone number.
3. Press **MENU/OK** and **▲/▼** to select **EDIT**.
4. Press **MENU/OK** and edit the number with the key **Int/☒/C**
5. Press **MENU/OK** and edit the name with the key **Int/☒/C**
6. Press **MENU/OK** to store

8.3 Delete an or all black list number

1. Follow steps from 1 to 3 in section 8.1
2. Press **MENU/OK** and **▲/▼** to choose the desired blocked phone number.
3. Press **MENU/OK** and **▲/▼** to select **DELETE or DELETE ALL**.
4. Press **MENU/OK** and the display shows "CONFIRM?".
5. Press **MENU/OK** to confirm.

8.4 Activation of the black list function

You have the possibility to block all the incoming calls, authorized only the VIP numbers or to stop the function.

1. Press **MENU/OK**, and **▼/▲** to select **CALL BLOCK**.
2. Press **MENU/OK**, and **▼/▲** to select **SETTINGS**.
3. Press **MENU/OK** and **▼/▲** to select **BLOCK MODE**
4. Press **MENU/OK** and choose the type of blocking **OFF**, **BLOCK ALL** or **ALLOW VIP**.
1. Press **MENU/OK** to confirm and the display shows the icon 
5. Press **MENU/OK** to save.

8.5 Activation of the function for the Private or Unavailable numbers

You have the possibility to block the private or unavailable numbers only.

1. Follow steps from 1 to 2 in section 8.4
2. Press **MENU/OK** and **▲/▼** to select **W/O NUMBER**.
3. Press **MENU/OK** and choose the type of blocking **PRIVATE** or **UNAVAILABLE**
4. Press **MENU/OK** and **▲/▼** to select **BLOCK**.
5. Press **MENU/OK** to confirm.

9. INTERCOM FUNCTION

Please refer at the chapter 4.12 for different transfer modes

10. DATE AND HOUR SETTING

You will need to set the correct date and time so that you know when you received answering machine messages or an incoming call.

The date & Hour is automatically setting when you receive a call if you have subscribed at the service CID, else follow the procedures

10.1 Set the Date Format

1. Press **MENU/OK** and **▲/▼** to select **DATE & TIME**.
2. Press **MENU/OK** to show **DATE FORM**.
3. Press **MENU/OK** and **▲/▼** to select your desired date format (**DD--MM--YY** or **MM--DD--YY**).
2. Press **MENU/OK** to confirm.

10.2 Set the Time Format

1. Press **MENU/OK** and **▲/▼** to select **DATE & TIME**.
2. Press **MENU/OK** and **▲/▼** to select **TIME FORM**.
3. Press **MENU/OK** and **▲/▼** to select your desired time format (**12 HR** or **24 HR**).
4. Press **☞** to confirm.

10.3 Set the Time

1. Press **MENU/OK** and **▲/▼** to select **DATE & TIME**.
2. Press **MENU/OK** and **▲/▼** to select **SET DATE**.
3. Press **MENU/OK** and enter the date information with the keypad
4. Press **MENU/OK** and enter the time information with the keypad
5. Press **MENU/OK** to confirm.

NOTE:

If time has been set before, the current time will display, otherwise, "HH--MM" will be displayed.

11. TEXT LANGUAGE SETTING

This information is asked you at the first start of your phone.

You have the choose among 7 languages (English, French, German, Dutch, Spain, Portuguese and Italian)

If you want change of language, please follow these instructions

On Base:

1. Press **MENU/OK**, and **▼/▲** to select **TEXT LANG**.
2. Press **MENU/OK**, and **▼/▲** to choose your desired text language.
3. Press **MENU/OK** to save.

12. PHONE SETTING

12.1 Base Settings

12.1.1 Set the Ringer Melody for Internal Calls

You can set special melody to personalize your base internal ringer. A total of 5 melodies are provided for your selection.

1. Press **MENU/OK** and **▲/▼** to select **SETTINGS**.
2. Press **MENU/OK** and **▲/▼** to select **RING SETUP**.
3. Press **MENU/OK** and **▲/▼** to select **INT. RING**.
4. Press **MENU/OK** and the display will show **MELODY**.
5. Press **MENU/OK** and **▲/▼** to select the desired ringer melody for internal calls.
6. Press **MENU/OK** to confirm.

NOTE:

The respective ringer melody will be played during your selection.

12.1.2 Set the Ringer Melody for External Calls

You can set special melody to personalize your base external ringer. A total of 5 melodies are provided for your selection.

1. Press **MENU/OK** and **▲/▼** to select **SETTINGS**.
2. Press **MENU/OK** and **▲/▼** to select **RING SETUP**.
3. Press **MENU/OK** and **▲/▼** to select **EXT. RING**.
4. Press **MENU/OK** and the display will show **MELODY**.
5. Press **MENU/OK** and **▲/▼** to select the desired ringer melody for external calls.
6. Press **MENU/OK** to confirm.


12.1.3 Set the Ringer Volume

You can adjust the volume level of the ringer for internal call (INT RING) and external call (EXT RING) separately, with settings from 1 (the quietest) to 5 (loudest), or set it to **VOLUME OFF**.

1. Follow steps from 1 to 2 in section 12.1.1.
2. Press **MENU/OK** and **▲/▼** to select **RING VOLUME**.
3. Press **MENU/OK** and **▲/▼** to select the desired volume level list.
4. Press **MENU/OK** to confirm.

NOTE:

The respective ringer volume will be played during your selection. If **VOLUME OFF** is selected,

 icon will display.

12.1.4 Set the Key Tone

The key tone is a confirmation beep when you press any key. It is set on by default but can be turned off, if desired.

1. Press **MENU/OK** and **▲/▼** to select **BS SETTINGS**.
2. Press **MENU/OK** and **▲/▼** to select **KEY TONE**.
3. Press **MENU/OK** and **▲/▼** to select **ON** or **OFF**.
4. Press **MENU/OK** to confirm.

12.1.5 Set the Flash Time

The default flash time is best suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

1. Press **MENU/OK** and **▲/▼** to select **BS SETTINGS**.
2. Press **MENU/OK** and **▲/▼** to select **FLASH TIME**.
1. Press **MENU/OK** and **▲/▼** to select the desired flash time (**SHORT**=100ms, **MEDIUM**=300ms, **LONG**=600ms).
3. **MEDIUM**=300ms, **LONG**=600ms).
4. Press **MENU/OK** to confirm.

12.1.6 First ring function

Sometimes, our phone rings one time to inform that we have any voice message on the line. To remove this ringer, you must activate the function.

1. Press **MENU/OK** and **▲/▼** to select **BS SETTINGS**.
2. Press **MENU/OK** and **▲/▼** to select **FIRST RING**.
3. Press **MENU/OK** and **▲/▼** to select **ON** or **OFF**.
4. Press **MENU/OK** to confirm.

12.1.7 Reset Your Base






You can reset all of your base settings to their default settings. After a reset, all your personal base settings, call list entries, redial list entries and answering messages will be deleted.

1. Press **MENU/OK** and **▲/▼** to select **BS SETTINGS**
2. Press **MENU/OK** and **▲/▼** to select **BS DEFAULT**.
3. Press **MENU/OK** and **▲/▼** to select **DEFAULT**.
4. Press **MENU/OK** and the display shows "**CONFIRM?**".
5. Press **MENU/OK** to confirm.


12.1.8 Registration of one additional handset

Register your handset according to the following procedure.

On the cordless handset:

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **REGISTER**.
3. Press  and the display will show "REGISTRING".

On the base:

4. Press **MENU/OK** and  to select **REGISTER**.
5. Press **MENU/OK** to see "REGISTERING" flashing on the base display. After a short delay, if the registration is successful, there will be a confirmation beep, and the handset display will go back to idle mode with the new handset number shown. The base display will also go back to idle mode.
6. Press **INT/MUTE/CLEAR** at any time to cancel.

13. RESEARCH ONE HANDSET(only with additional handset)

You can make a research of your handsets in using the function PAGE ALL HS. One time activate, all the handsets will be ring

1. Press **MENU/OK** and  to select **PAGE ALL HS**.
2. Press **MENU/OK** to confirm.

14. SOS EMERGENCY FUNCTION

14.1 SOS settings


You need to set the SOS numbers before you can make SOS emergency calls.

1. Press **MENU/OK**, and **▼/▲** to select **SET SOS**.
2. Press **MENU/OK**, and **▼/▲** to select **SOS NUMBER**.
3. Press **MENU/OK** and **▼/▲** to select the SOS number to edit (**SOS 1, SOS 2, SOS 3 or SOS 4**).
4. Press **MENU/OK** and select **ADD** to enter a new number or **EDIT** to modify the number stored already.
5. Press **MENU/OK** and enter a phone number or edit the number stored already.
6. Press **MENU/OK** and enter a new name or edit the name stored already.
7. Press **MENU/OK** to confirm or **Int/☒/C** to delete.

14.2 Delete an or all SOS number

1. Press **MENU/OK**, and **▼/▲** to select **SET SOS**.
2. Press **MENU/OK**, and **▼/▲** to select **SOS NUMBER**.
3. Press **MENU/OK** and **▼/▲** to select the SOS number to delete (**SOS 1, SOS 2, SOS 3 or SOS 4**).
4. Press **MENU/OK** and select **DELETE or DELETE ALL**.
5. Press **MENU/OK** and the display shows "CONFIRM?".
7. Press **MENU/OK** to confirm.

14.3 Make SOS emergency calls

Press and hold 2 seconds **SOS/AMPLIFY**  on the base to launch the emergency calling sequence from the SOS 1 number to SOS 4 number. A call will be first dialed to the SOS 1 number. If the SOS 1 number does not answer in 60 seconds, the call will be made to the SOS 2 number, and so on. See note.

NOTE:

- The other party receiving the SOS message must press any number on their phone to open the SOS call. Thereafter by pressing any number on their phone every two minutes will keep the emergency call open else the phone stops the call 10 seconds after.
- To stop the procedure launch by error, press and hold the SOS key until the alarm SOS stop.

14.4 Record SOS messages

You can record your customized SOS message to be played when you dial out an SOS emergency call otherwise the default message will be played.

1. Press **MENU/OK**, and **▼/▲** to select **SET SOS**.
2. Press **MENU/OK**, and **▼/▲** to select **SOS MSG**.
3. Press **MENU/OK** and **▼/▲** to select **RECORD**.
4. Press **MENU/OK** to start SOS message recording and "RECORDING ANNC..." will be displayed.
5. Press **MENU/OK** to save your SOS message.

14.5 Play SOS messages

1. Press **MENU/OK**, and **▼/▲** to select **SET SOS**.
2. Press **MENU/OK**, and **▼/▲** to select **SOS MSG**.
3. Press **MENU/OK** and **▼/▲** to select **PLAY**.
4. Press **MENU/OK** to start SOS message playback.
5. Press **▶PLAY/■STOP** to stop SOS message playback.

14.6 Delete a SOS messages



1. Press **MENU/OK**, and **▼/▲** to select **SET SOS**.
2. Press **MENU/OK**, and **▼/▲** to select **SOS MSG**.
3. Press **MENU/OK** and **▼/▲** to select **DELETE**.
4. Press **MENU/OK** to delete your message and come back at the origin announce.

14.7 Set the talking language



You can choose the voice prompt language of the answering machine from a total of 4 languages (French, English, Dutch and German).

1. Press **MENU/OK**, and **▼/▲** to select **SET SOS**.
2. Press **MENU/OK**, and **▼/▲** to select **SOS LANG**.
3. Press **MENU/OK** and **▼/▲** to select your desired vocal language
4. Press **MENU/OK** to confirm.

15 SETTING AN ALARM

You can use this phone to set an alarm clock. When an alarm is set, the  displays on the screen. When the alarm time is reached, the  and "ALARM ON" flash on the screen ringing with the alarm melody for a duration of 45 seconds. You can press any key to disable the alarm.

NOTES:

- a. Key press is still applicable if handset keypad is locked and when the alarm time is reached.
- b. The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **OFF**, the alarm still sounds at **VOLUME 1** level.
- c. During an external call or an internal call, if an alarm is set and when the alarm time is reached, the  and "ALARM ON" will still flash. An alarm tone will be emitted from the earpiece to notify user the alarm time is reached. Once user press any key or press and hold  to disable the alarm, it will revert to the call duration screen.

15.1 Turn on/off the Alarm

You have the choice to enter 10 Alarms.


1. Press **MENU/OK**, and **▼/▲** to select **REMINDER**.
2. Press **MENU/OK**, and **▼/▲** to select your alarm.
3. Press **MENU/OK** and **▼/▲** to select **ON/OFF**.
4. Press **MENU/OK** and select **ON**.
5. Press **MENU/OK** and enter the time.
6. Press **MENU/OK** and choose the frequency (**ONCE/ DAILY/ MON-FRI/SAT-SUN**).
7. Press **MENU/OK** to confirm.

15.2 Set the Alarm melody

You have the choice to select 1 of the 10 Melodies.

1. Follow steps from 1 to 2 in section 15.1.
2. Press **MENU/OK** and ▼/▲ to select **MELODY**.
3. Press **MENU/OK** and ▼/▲ to select your desired alarm melody.
4. Press **MENU/OK** and ▼/▲ to select **ON/OFF**.
5. Press **MENU/OK** to confirm.

15.3 Rename the name of your Alarm

1. Follow steps from 1 to 2 in section 15.1.
2. Press **MENU/OK** and ▼/▲ to select **RENAME**.
3. Press **MENU/OK** then  to delete the characters and enter the new name
4. Press **MENU/OK** to confirm.

15.4 Record a voice memo for the Alarm

1. Follow steps from 1 to 2 in section 15.1
2. Press **MENU/OK** and ▼/▲ to select **VOICE MEMO**.
3. Press **MENU/OK** and select **RECORD**.
4. Press **MENU/OK** and start your message after the beep.
5. Press **MENU/OK** to stop the recording, your message is playing

15.5 Delete or play a voice memo Alarm

1. Follow steps from 1 to 2 in section 15.4.
2. Press **MENU/OK** and ▼/▲ to select **DELETE** or. **PLAY**
3. Press **MENU/OK** to delete or play the memo message.

16 TALKING HELP FUNCTION

You have the choose to activate or deactivate the function Talking Digits.

Activate: this function announces the digit dial or the CID number when you receive a call and that you have subscribed to the service.

1. Press **MENU/OK**, and ▼/▲ to select **TLK DIGITS**.
2. Press **MENU/OK**, and ▼/▲ to select **ON** to **OFF**.
3. Press **MENU/OK** to confirm.

17 ANSWERING MACHINE

Your telephone base includes a telephone answering machine that records unanswered calls when it is on. The answering machine can store up to 59 messages within the maximum recording time of approximately 15 minutes. As well as recording incoming messages, you can record memos for other users of your phone.

17.1 Switching Answering Machine On/Off

Using the base direct key:

You can switch on / switch off the TAM function by pressing **ANS ON/OFF**.

Using the base menu:

Alternatively, you can switch the TAM on or off using the base menu.

1. Press **MENU/OK** and **▲/▼** to select **ANS. SYS**.
2. Press **MENU/OK** and **▲/▼** to go to **TAM ON/OFF**.
3. Press **MENU/OK** and **▲/▼** to select **ON** or **OFF**.
4. Press **MENU/OK** to confirm.

17.2 Play Messages on TAM

If you have new messages, the display will show e.g. 02/05 MSGS, which means you have 2 new message out of total 5 messages. New messages are played first, and then are saved as old messages, until they are deleted. Old messages are played again after all new messages are played completely.

Using the base direct key:

In idle:

1. Press **PLAY/STOP** to listen to messages and memos.
2. Press **PLAY/STOP** if you want to stop the playback.
3. Press **◀** once if you want to repeat the current message from the beginning, or press twice to skip back to the previous message during message playback.
4. Press **▶** if you want to skip forward to the next message during message playback.
5. Press **DELETE** if you want to delete the current message being played.
6. Press **SLOW** to reduce the speed of the playback

Using the base menu:

1. Press **MENU/OK** and **▲/▼** to select **ANS. SYS**.
2. Press **MENU/OK** to show **PLAYBACK**.
3. Press **MENU/OK** to start playing back the messages from speakerphone.
4. During message playback, press **▲/▼** to adjust the message playback volume respectively OR you can during the message
1. Press **MENU/OK** and **▲/▼** to select **STOP, FORWARD, PREVIOUS, SLOW ON** or **DELETE** to perform the following functions during message playback.
 - **STOP:** Stop the current message playback and return to the **ANS. MACHINE** menu.
 - **FORWARD:** Skip to play the next message. The date information of the next message will display if there is next message.
 - **SLOW ON:** to reduce the speed of the playback
 - **PREVIOUS:** Skip to repeat playing the current message from the beginning. The date information of the current message will display.
 - **DELETE:** Delete the current message and the next message will be played.

Press **Int/☒/C** to confirm the setting

NOTE:

After new message is played, the new message will be saved as an old message automatically unless it is deleted.

17.3 Delete all Messages on TAM

Using the base menu:

1. Press **MENU/OK** and **▲/▼** to select **ANS. SYS.**
2. Press **MENU/OK** and **▲/▼** to select **DEL OLD.**
3. Press **MENU/OK.** and the display shows **CONFIRM?**
4. Press **MENU/OK** to confirm delete all old messages.

Using the base direct key:

Press and hold **DELETE** to delete all the old messages.

NOTE:

You cannot delete new messages, so you will have to play them before trying to delete

17.4 Record Memos on TAM

You can record your memo message for another user. When you record a memo, the message counter will increase by one and the message can be played in the same way as answering machine messages. Memo recording can still function even when the answering machine is turned off.

1. Press **MENU/OK** and **▲/▼** to select **ANS SYS.**
2. Press **MENU/OK** and **▲/▼** to select **MEMO.**
3. Press **MENU/OK** to start recording the memo, and "RECORDING" is shown on the display.
4. Press **MENU/OK** to save and end your memo recording. The new memo will then play back automatically. Let it play to the end or press **MENU/OK** again to stop the playback. Or press **Int/☒/C** at any time to stop the memo without saving it.

17.5 Answering Machine Settings

17.5.1 Set the talking TAM Language

You can choose the voice prompt language of the answering machine from a total of 4 languages. (English, French, Dutch and German)

1. Press **MENU/OK** and **▲/▼** to select **ANS. SYS.**
2. Press **MENU/OK** and **▲/▼** to select **SET TAM.**
3. Press **MENU/OK** and **▲/▼** to select **TAM LANG.**
4. Press **MENU/OK** and **▲/▼** to select the desired voice prompt language for the answering machine, talking language and SOS message.
5. Press **MENU/OK** to confirm

17.5.2 Turn On or Off the Base Screening

You can select to turn on or off the call screening on base. When the answering machine is set to ON and when there is an incoming message, the base will start call screening automatically after the preset numbers of rings of answer delay.

1. Press **MENU/OK** and **▲/▼** to select **ANS. SYS.**
2. Press **MENU/OK** and **▲/▼** to select **SET TAM.**
3. Press **MENU/OK** and **▲/▼** to select **CALLSCREEN.**
4. Press **MENU/OK** and **▲/▼** to select **ON** or **OFF.**
5. Press **MENU/OK** to confirm.

17.5.3 Record your Outgoing Message (OGM)

You can record your own OGM for ANS & REC mode. When you record your own OGM, it will be used when the answering machine answers the call. If your personalized OGM is deleted, the pre-set OGM will be restored automatically.

1. Press **MENU/OK** and **▲/▼** to select **ANS. SYS.**
2. Press **MENU/OK** and **▲/▼** to select **SET TAM.**
3. Press **MENU/OK** and **▲/▼** to select **TAM MSG.**
4. Press **MENU/OK** and **▲/▼** to select **RECORD.**
5. Press **MENU/OK** to start recording your personalized OGM and "RECORDING" is displayed on the screen.
6. Press **MENU/OK** to stop and save your personalized OGM. Your new saved OGM will playback automatically. Alternatively, press **Int/☒/C** to return to previous screen without saving the personalized OGM.

17.5.4 Playback the Outgoing Message (OGM)

Using the base direct key:

Press **◀** briefly to listen to the current OGM.

Using the base menu:

1. Press **MENU/OK** and **▲/▼** to select **ANS. SYS.**
2. Press **MENU/OK** and **▲/▼** to select **SET TAM.**
3. Press **MENU/OK** and **▲/▼** to select **TAM MSG.**
4. Press **MENU/OK** and **▲/▼** to select **PLAY.**
5. Press **MENU/OK** to playback your personalized OGM (if you have recorded a personalized OGM before) and "PLAYING ANNC" is displayed on the screen.
6. Press **Int/☒/C** to stop the OGM playback and return to the previous menu.

NOTE:

If a personalized OGM is not recorded before, the pre-set OGM will be played.

17.5.5 Delete a Personalized OGM (SET OGM to DEFAULT)

1. Repeat Steps 1 to 3 in the section 17.4.4
2. Press **MENU/OK** and **▲/▼** to select **DELETE.**
3. Press **MENU/OK** to confirm.

17.5.6 Set the Answer Delay

You can set the number of rings before the answering machine answers and starts playing your OGM. You can set the answering machine to answer after two to ten rings or TIME SAVER.

The TIME SAVER function answers calls after 6 ring signals, until the first new message has been registered - then the answering machine switches to answering after approximately 2 signals. This is useful when using remote access; if you call up the answering machine and there is no reply after four rings that means there are no messages recorded and you can hang up before you are charged for the call.

1. Press **MENU/OK** and **▲/▼** to select **ANS. SYS.**
2. Press **MENU/OK** and **▲/▼** to select **SET TAM.**
3. Press **MENU/OK** and **▲/▼** to select **ANS DELAY** (Available options: **2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS, 10 RINGS** or **TALL SAVE**).
4. Scroll **MENU/OK** and **▲/▼** to select the desired answer delay.
5. Press **MENU/OK** to confirm.

17.5.7 Set the Recording Time of Incoming Message

You can set the maximum length of the recording time of the incoming messages.

1. Press **MENU/OK** and **▲/▼** to select **ANS. SYS.**
2. Press **MENU/OK** and **▲/▼** to select **SET TAM.**
3. Press **MENU/OK** and **▲/▼** to select **REC TIME.**
4. Press **MENU/OK** and **▲/▼** to select your desired recording time (Available options: **60S, 120S, 180S, or UNLIMITED**).
5. Press **MENU/OK** to confirm.

17.5.8 Activate Remote Access

Your phone lets you check your messages, or otherwise operate your answering machine, by calling the answering machine when you are away from home by entering a 4-digit remote access PIN on a tone-dialing phone. Use the 4-digit remote access PIN code to prevent other people from unauthorized access of your answering machine.

17.5.8.1 Change the 4-Digit Remote Access PIN

1. Press **MENU/OK** and **▲/▼** to select **ANS. SYS.**
2. Press **MENU/OK** and **▲/▼** to select **SET TAM.**
3. Press **MENU/OK** and **▲/▼** to select **CHANGE PIN.**
4. Press **MENU/OK** and enter your new code pin
5. Press **MENU/OK** to confirm.

17.5.8.2 Activate or Deactivate the Remote access

1. Press **MENU/OK** and **▲/▼** to select **ANS. SYS.**
2. Press **MENU/OK** and **▲/▼** to select **SET TAM.**
3. Press **MENU/OK** and **▲/▼** to select **REMOTE ACC.**
4. Press **MENU/OK** and **▲/▼** to select **ON** or **OFF** to turn on or off the remote access respectively.
5. Press **MENU/OK** to confirm.

17.5.9 Function message alert

When you have a new message, you can hear a beep every 10 seconds. If you want deactivate this beep, follow the procedure.

1. Press **MENU/OK**, and **▼/▲** to select **ANS.SYS.**
2. Press **MENU/OK**, and **▼/▲** to show **SET TAM.**
3. Press **MENU/OK** and **▼/▲** to select **MSG ALERT.**
4. Press **MENU/OK** and **▼/▲** to select **OFF.**
5. Press **MENU/OK** to confirm.

17.5.10 Remote Operations

If you are away from your home, you can call your answering machine to switch on or off the answering machine and listen to your messages remotely using another tone-dialing phone.

1. Place a call from a tone-dialing phone.
2. When the answering machine answers the call and starts playing OGM, press **X**.
3. Enter the 4-digit Remote Access PIN (default PIN is 0000).
4. Press the following keys to carry out your desired function.

Keys	Functions	
	While message is not playing	While message is playing
2		Delete the current message playback
4		Repeat playing the current message from the beginning. Press twice to skip backward to the previous message.
5	Play the message	
6		Skip forward to play the next message
7	Turn on the answering machine	
8		Stop the current message playback
9	Turn off the answering machine	
*	Enter the 4-digit remote access PIN	

NOTE:

- When your answering machine memory is full and the answer mode is in ANS & RECORD, the answer mode will change to ANSWER ONLY automatically. It will change to ANS & RECORD mode automatically after some messages have been deleted.

18 TROUBLESHOOTING


If you have difficulty with your phone, please try the suggestions listed below.

Problem	Solutions
My telephone does not work at all.	<ul style="list-style-type: none">• For optimum daily performance, return the handset to the telephone base after use.• Make sure the power adapter is securely plugged into an outlet not controlled by a wall switch.• Make sure the telephone line cord is plugged firmly into the telephone base and the telephone wall jack.• Unplug the electrical power to the telephone base. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the handset and telephone base to synchronize.• Disconnect the telephone base from the telephone wall jack and plug in a working telephone. If the other telephone does not work, the problem is probably in the wiring or the telephone service. Call your telephone service provider.

There is interference during a telephone conversation. My calls fade out when I am using the handset.

- The handset may be out of range. Move it closer to the telephone base.
- If you subscribe to high-speed Internet service (digital subscriber line - DSL) through your telephone line, you must install a DSL filter between the telephone base and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.
- Appliances or other cordless telephones plugged into the same circuit as the telephone base can cause interference
- Try moving the appliance or telephone base to another outlet.
- Other electronic products may cause interference to your cordless telephone. Install your telephone as far away as possible from the following electronic devices: wireless routers, radios, radio towers, pager towers, cellular telephones, digital telephones, intercoms, room monitors, televisions, VCRs, personal computers, kitchen appliances, and other cordless telephones.
- If your telephone is plugged in with a modem or a surge protector, plug the telephone (or modem/surge protector) into a different location. If this doesn't solve the problem, re-locate your telephone or modem farther apart from each other, or use a different surge protector.
- The location of your telephone base can impact the performance of your cordless phone. For better reception, install the telephone base in a centralized location within your home or office, away from walls or other obstructions. In many environments, elevating the telephone base improves overall performance.
- Disconnect the telephone base from the telephone wall jack and plug in a corded telephone. If calls are still not clear, the problem is probably in the wiring or telephone service.
- Contact your telephone service provider (charges might apply).
- If the other telephones in your home are having the same problem, the problem is in the wiring or telephone service.
- Contact your telephone service provider (charges may apply).

19 TECHNICAL SPECIFICATIONS

Basic Information	
Valid Range	Indoor : 50m Outdoor :300m
Handset Operating time	Standby time : 100 hours Talk time : 10 hours approx.
RF Parameter	
Frequency	1.88 GHz to 1.9GHz
Nb Channels	10
RF power	< 250mW
Power Supply	
Base	Input 100-240V 50/60Hz; output DC6V  0.45A, 2.7W adapter
Handset	2.4V ; 500mAH rechargeable NiMh battery pack

* Values may vary according to environment.

** Depending on initial battery charge.

20 CARE AND MAINTENANCE INSTRUCTIONS

Take care of your telephone

- Your cordless telephone contains sophisticated electronic parts, so you must treat it with care.
- Avoid rough treatment.
- Place the handset down gently.
- Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

- You can damage your telephone if it gets wet. Do not use the handset in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Electrical storms

- Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electric appliances during storms.

Cleaning your telephone

- Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap.
- Do not use excess water or cleaning solvents of any kind.

NOTE

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone base should fall into water, **DO NOT**

RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL. Then pull the unit out by the unplugged cords.

CAUTION

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN
INCORRECT TYPE.
DISPOSE OF USED BATTERY ACCORDING TO THE
INSTRUCTIONS.**

21 GUARANTEE

From the moment your Geemarc product (CL595) is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at www.geemarc.com.

The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative.

The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only.

22 DECLARATIONS:

CE CE Directives

Geemarc Telecom SA hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/UE.

The CE declaration of conformity may be consulted at www.geemarc.com

Recycling Directives

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin. Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip.

Deposit the product in an appropriate WEEE skip.

- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.

For product support and help visit our website at

www.geemarc.com

E-mail : help@geemarc.com telephone **01707 387602**

lines are open 09h00 to 16h00 Mon to Fri

Manufacturer: Vtech (Dongguan) Telecommunications Limited.

Vtech Science Park, Xia Ling Bei Management Zone, Liaobu, Dongguan, Guangdong.

This product is made in China To Geemarc Telecom



UG CL595_En_v1.4

Geemarc Telecom FRANCE
2 rue Galilée-
Parc de l'étoile
59791 GRANDE-SYNTHE Cedex
France

E-mail : help@geemarc.com telephone 01707 387602
lines are open 09h00 to 16h00 Mon to Fri